

Tools and Materials	Cut List
3 - 1x3 furring strips, 8 feet long 20 - 2" long self tapping wood screws Tape Measure Carpenter's Square Circular Saw Drill Clamps Predrilling bit (recommended) Wood Stain or Paint Safety Glasses	2 - 1x3 @ 72" long 5 - 1x3 @ 16" long

Cutting Instruction


Measure and mark the length to cut. Use the carpenter's square to mark cut length all the way across the board. Secure board to worksurface with clamps, with cutting location extended off worksurface. Cut board with circular saw.

Prestaining

If staining, your project will look better if you stain before assembly.


Step 1: Mark Legs

On both 1x3 boards cut to 72" long, mark as shown in the diagram with a pencil.

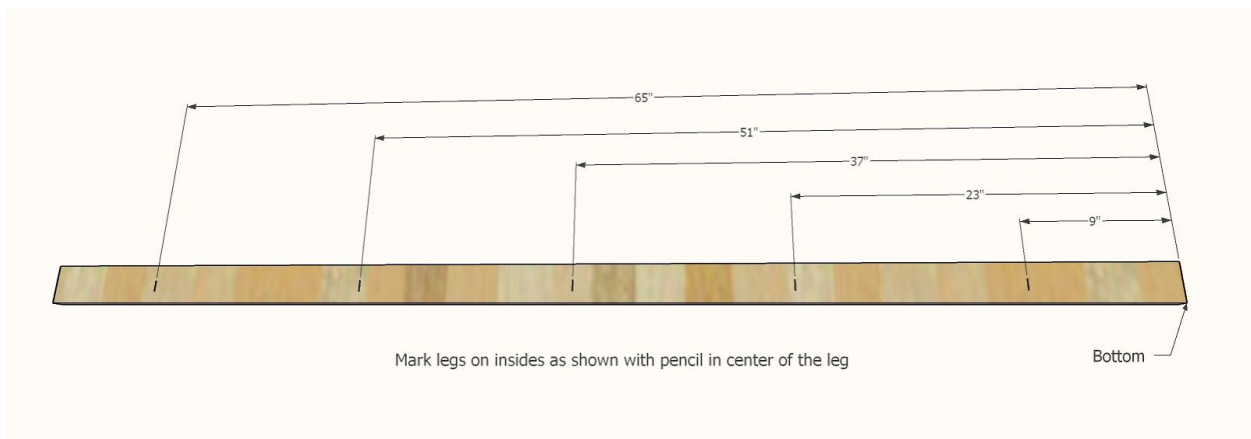


Step 2: Attach First Rung

Space a rung up on a scrap piece of 1x3 board, supporting both ends. Clamp the rung to your worksurface. For beginners, predrilling is recommended but not required. Attach with top edge on inside leg mark, with two screws.

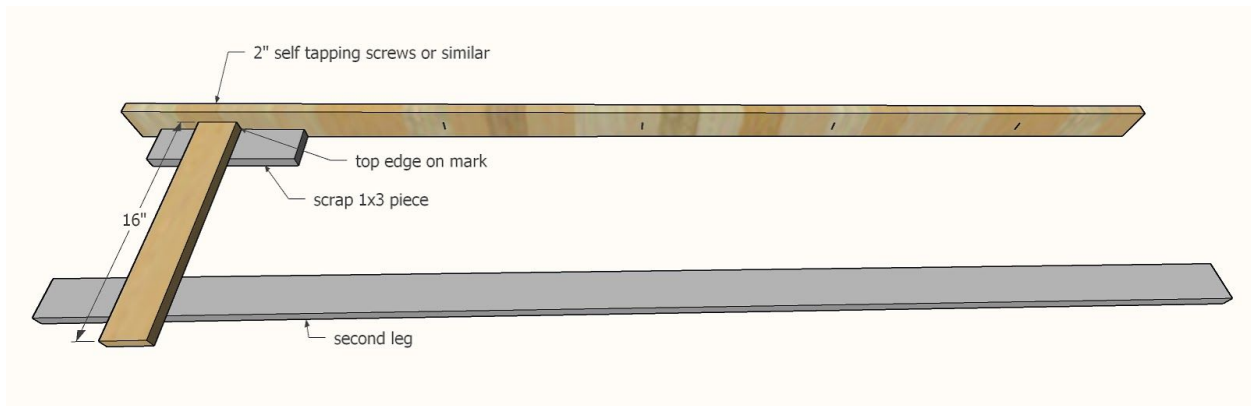

Step 3: Attach Remaining Rungs

Repeat steps to attach remaining rungs to first leg.

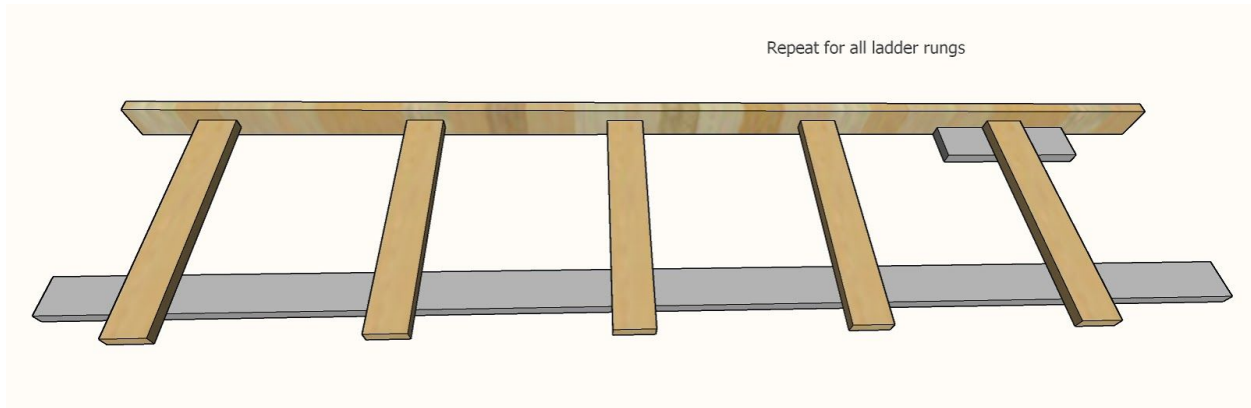

Step 4: Attach Remaining Leg

Attach remaining leg to all rungs, using the spacer block to elevate each rung as you screw through the leg into the end of the rungs.

